

ARF53 RESTORE DEFAULT PARAMETERS



Document updates

Versions	Date	Notes
A0	15/03/2009	creation

Reference documentation

Date/version	Description

Notations

	Description

SUMMARY

1	INTRODUCTION.....	2
2	RESTORING DEFAULT PARAMETERS.....	2

1 INTRODUCTION

This technical note describes how to restore the default setting of an ARF53. This is usefull in case of setup error while evaluating the product.

CAUTION : this can be done with a firmware version \geq V01.00

2 RESTORING DEFAULT PARAMETERS

1. Power OFF the unit
2. Establish a short-circuit as describe in the above picture
3. Power ON the unit (→ the unit output continuously a 'o' using 9600,n,8,1 settings)
4. Power OFF the unit and remove the short-circuit
5. Now the unit has retrieved its default setting ; It can be used with a terminal using 9600,n,8,1 settings

WARNING: If step 3 failed, you can have a too old unit version (version \geq V01.00 required).

CAUTION: short circuit MUST NOT BE DONE while the unit is still running

